Instruction Manual

HI935005 - HI935005N HI935002 - HI935009

Portable K-Thermocouple Thermometers





www.hannainst.com

Dear Customer,

Thank you for choosing a Hanna Instruments Office product. Please red this instruction manual catefully before using the instrument. This manual will provide you with the necessary information for correct use of the instrument, as well as a more precise idea of its versafility. If you need additional technical information, do not hesitate to e-mail us of the/Qiahamainst.com.

These instruments are in compliance with the C ϵ directives.

PRELIMINARY EXAMINATION

Remove the instrument from the packing material and examine it to make sure that no damage has occurred during shipping. If there is any damage, please contact your local Hanna Instruments Office. Each meter is supplied complete with:

• 3 x 1.5V AA alkaline batteries;

Instruction manual.

Note: Save all packing material until you are sure that the instrument functions correctly. All defective items must be returned in the original packing with the supplied accessories.

TABLE OF CONTENTS

PRELIMINARY EXAMINATION	3
GENERAL DESCRIPTION	
SPECIFICATIONS OF H1935005 AND H1935005N	
SPECIFICATIONS OF HI935002 AND HI935009	
OPERATIONAL GUIDE	
USER CALIBRATION	
FACTORY RECALIBRATION	12
BATTERY REPLACEMENT	13
ACCESSORIES	14

All rights are reserved. Reproduction in whole or in part is prohibited without the written consent of the copyright owner.

2

GENERAL DESCRIPTION

H1935005, H1935005N, H1935002 and H1935009 are powerful and flexible K-type thermocouple thermometers, which have been designed using the latest microprocessor technology to provide reliable and accurate measurements in a wide temperature range.

Standard features include K-type probes, waterproof casing, dual-level LCD, low battery detection, long battery life and two-year warranty.

HI935005 has been designed for laboratory and field use, while HI935005N is suitable for high accuracy (meter and probe can be calibrated in an ice bath at 0 °C) or dimly lit areas (the backlight feature can be easily activated through the keyboard).

HI935002 is a two-channel thermometer, ideal for monitoring two samples at once, while HI935009 offers all the features of HI935002 and more: calibration of meter and probe at 0 °C, backlight, user-selectable auto-off time period, and capability to store and recall a reading.

SPECIFICATIONS OF HI935005 & HI935005N

	SPECIFICATIONS
Range (*)	-50.0 to 199.9 °C / 200 to 1350 °C
	-58.0 to 399.9 °F / 400 to 2462 °F
Developing	0.1 °C (up to 199.9 °C) / 1 °C (outside)
Resolution	0.1 °F (up to 399.9 °F) / 1 °F (outside)
Accuracy	\pm 0.2% full scale
(@20 °C/68 °F)	for one year, excluding probe error
Typical EMC	±3 °C / ±6 °F
Deviation	with H1766 K-thermocouple probe
Battery	3x1.5V AA (IEC LR6) batteries, approx. 1600 hours of continuous use (BL off)
Auto-off (HI935005 only)	user selectable: 8 min, 60 min, disabled
Environment	-10 to 50 °C (14 to 122 °F); RH 100%
Dimensions	150 x 80 x 36 mm (5.9 x 3.1 x 1.4")
Weight	235 g (8.3 oz.)

(*) Range may be limited by probe.

Main features:

- HI766 K-thermocouple probes
- Display of temperature in degrees Celsius or Fahrenheit
- Range -50 to 1350 °C or -58 to 2462 °F
- HOLD function
- HI and LO (Max and Min) temperature values always displayed on the LCD
- Remaining battery life indication / low battery detection
- Waterproof casing
- Auto-off capability (HI935005 only)
- Backlight feature (HI935005N only)
- User calibration at 0 °C (HI935005N only)

4

HI935005

H1935005N





Keyboard Functions:

DN/OFF : hum the meter ON and OFF. HOLD : herear the reading on display. "CFF : change reading unit ("C or "f). CLR : clear the HI and LD values. BL (H193500SN only) : pages the backight ON and OFF. CAL (H195300SN only) : personal hold far 5 seconds to enter the Calibration mode (with reading within ±3 "C range); press to abort the Galibration mode.

SPECIFICATIONS OF HI935002 & HI935009

	SPECIFICATIONS
Range (*)	-50.0 to 199.9 °C / 200 to 1350 °C
	-58.0 to 399.9 °F / 400 to 2462 °F
Bereleting	0.1 °C (up to 199.9 °C) / 1 °C (outside)
Resolution	0.1 °F (up to 399.9 °F) / 1 °F (outside)
Accuracy	±0.2% full scale
(@20 °C/68 °F)	for one year, excluding probe error
Typical EMC	±3°C/±6°F
Deviation	with H1766 K-thermocouple probe
Battery	3x1.5V AA (IEC LR6) batteries, approx. 1600 hours of continuous use (BL off)
Auto-off (H1935009 only)	user selectable: 8 min, 60 min, disabled
Environment	-10 to 50 °C (14 to 122 °F); RH 100%
Dimensions	150 x 80 x 36 mm (5.9 x 3.1 x 1.4")
Weight	235 g (8.3 oz.)

 weight
 235 g (8.3 oz.)

 (*) Range may be limited by probe.

Main features:

- Two independent measurement channels, T1 and T2
- HI766 K-thermocouple probes
- Display of temperature in degrees Celsius or Fahrenheit
- Range -50 to 1350 °C or -58 to 2462 °F
- HOLD function
- HI and LO (Max and Min) temperature values always displayed on the LCD
- DISP function to select the information to be displayed (Normal, Relative or T1/T2)
- Remaining battery life indication / low battery detection
- Waterproof casing
- Auto-off capability (HI935009 only)
- MR function for recalling memorized reading (HI935009 only)
- Backlight feature (HI935009 only)
- User calibration at 0 °C (HI935009 only)



HI935002

HI935009



Keyboard Functions:

ON/OFF : turn the meter ON and OFF.

T1/T2 : select the reading channel (T1, T2 or T1-T2).

HOLD : freeze the reading on display. In H1935009, the frozen value is also stored in non-volatile memory.

CLR : clear the HI and LO values, reset the relative measurement.

DISP : select Normal, Relative or T1/T2 measuring mode.

ALT (HI935009 only) : enable the second function keys; the "ALT"

tag turns on to indicate that the second functions are enabled. Note: The ALT key can be released before pressing the second

function key for 1-hand operation. ALT/ \triangleright CAL : press and hold for about 5 seconds to enter the Calibration mode (with reading within ± 3 °C range).

(ALT +) AOFF : set auto power off delay (8min, 60min, disabled).

(ALT +) °C/°F : change reading units (°C or °F).

(ALT +) MR : recall memorized value.

(ALT +) BL : toggle the backlight ON and OFF.

OPERATIONAL GUIDE

To switch the instrument ON, press the ON/OFF key. The thermometer will carry out a self diagnostic test routine, the LCD will show all segments for a few seconds (or as long as ON/OFF is held), followed by the percentage indication of the remaining battery life. The thermometer then enters normal measurement mode.



If a temperature probe is plugged in, the meter displays the measured temperature.

If no probe is plugged in, or if the reading is over-range, the display shows flashing dashes.

Ľ

If a measurement is slightly over the range of the meter specifications, the display will flash ~ the closest full-scale value.

To switch the meter OFF, press the ON/OFF key.



Measurements can be displayed in either degrees Celsius or Fahrenheit. The meter is factory set to °C scale; to change the scale, press °C°F key or (ALT+) °C°F keys, or set the switch located in the battery compartment (H1935002 only, see figure on page 10).



HOLD and MR FUNCTIONS

The HOLD function is activated by pressing the HOLD key. The measured temperature is held on the display until HOLD is pressed again. The "HOLD" tag blinks on the display while in HOLD mode.





Note: Although the display is frozen, internally the meter continues measuring and updating Hi/Lo and relative values.

In H1935000 only, the held value is also stored in non-volatile memory and can be recalled by pressing (ALT +) MR key. While the MR key is held, the "HOLD" tog lights up and the meter displays the stored value; when the MR key is released, after 1 second the meter returns to normal messurement mode.



HIGH/LOW TEMPERATURES

The maximum and minimum temperatures are continuously monitored and displayed on the lower portion of the LCD.



Note: When the reading goes over-range or the probe is removed, the Hi and Lo values display dashes until cleared.

CLEAR FUNCTION

Upon pressing the CLR key, the High/Low values may be cleared at any time during measurement and the current reading is assigned to the highest and lowest temperature values for the displayed channel only.



AUTO SHUT-OFF (HI935005 and HI935009)

To save battery life, the **H1935005** and **H1935009** models are provided with an auto-off feature, which switches the instrument off after a certain period of nonuse.

The delay time can be changed by the user (8 minutes, 60 minutes, or disabled).

To access this feature, the HI935000 is provided within an internal button located in the battery comparison of a solution of the solution the 4 scews on the back of the meter and solet the deside auto-off time period by pressing the button and viewing the value on the LO. Re-attach the back making sure that the gasket is in place and tighten the 4 scews to ensure a waterfligit seal.



HI935009 allows the user to select the auto-off time period through the front keyboard; press (ALT+) ADFF to enter the mode, then set the desired auto shut-off interval (8 min, 6 0 min, or disabled) with the ALT key; release all buttons, wait a few seconds and the meter will return to normal measurement mode.



BACKLIGHT FEATURE (HI935005N and HI935009)

H1935005N and H1935009 models are provided with a Backlight feature, which can be easily activated through the keyboard by pressing the BL key or (ALT+) BL keys.



Note: The backlight automatically shuts off after approximately 1 minute with no buttons pressed.

BATTERY COMPARTMENT





2-CHANNEL MODELS (HI935002 and HI935009)

H1935002 and H1935009 models can monitor two samples through two independent temperature channels (probes).

The display will show the actual, Hi and Lo (or T1 and T2) values of the selected channel (T1, T2 or T1-T2). The corresponding tags will light up to inform the user.

To select the desired channel, use the T1/T2 key.

τι 17 - Γ10 1 - Ο-1 ×	$T_2 = \int_{-\infty}^{-\infty} \int_{-\infty}^{-\infty} \int_{-\infty}^{\infty} \int$	ТичТа 1 (7-1) 7-1 °С 1 (2-1) - 1 °С 1 (2-1) - 1 °С
100 300	- 15.0 25.0	15 ⁰ 0 5 ⁰ 0

The 2-channel models are also provided with the DISP function, which allows the user to select the information to be displayed.

- While in T1 or T2, pressing DISP will switch the display between standard and relative measurement modes.
 - In the standard mode, the main body of the LCD shows the current temperature while the lower portion displays the Hi/Lo limits for that channel.

When the meter enters relative mode, the current temperature for that channel is set as the reference temperature. Pressing CLR will also set the reference to the current temperature.



In relative mode, the main body of the LCD shows the difference from the reference temperature. The lower portion displays the current temperature for the selected channel.



Note: Pressing T1/T2 to change the channel will not alter the information chosen to be displayed for each channel (DISP). Relative mode can not be entered if dashes are shown in the main portion of the LCD.



USER CALIBRATION

The H1935005N and H1935009 models can be calibrated at 0 °C by using an ice bath.

- Prepare an ice bath with approximately equal volumes of distilled water and chopped ice made from distilled water.
- Immerse the temperature probe in the center of the ice bath, taking care not to touch the ice with the probe tip.
- Ensure that the meter is measuring a temperature within ± 3 °C. • To enter the Calibration mode, press and hold the CAL button for
- about 5 seconds. • The CAL tog turns on to indicate that the Calibration mode has been entered. Note: If the measurement is outside the ± 3 °C window, the meter does not enter Calibration mode.



- When the meter reaches the stability condition, which is detected when the measurement remains within ± 0.2 °C for 5 seconds, the calibration is accepted and the reading becomes 0 °C (32 °F).
- The meter then automatically returns to normal mode.
 Note: To exit the Calibration mode at any time, press the CAL key.
 User calibration is onto be entered in relative or in T1-T2 mode.
 User calibration is only performed on the current channel displayed (T1 or T2).

FACTORY RECALIBRATION

All Hanna Instruments thermometers have been accurately pre-calibrated at the factory.

It is generally recommended to have all thermometers recalibrated at least once a year. For an accurate recalibration, contact your local Hanna Instruments Office.

12

BATTERY REPLACEMENT

When the battery level is below 10%, a warning symbol will blink on the LCD to indicate a low battery condition.



If the battery level is low enough to cause erroneous readings, the Battery Error Prevention System (BEPS) turns the meter off. Immediately replace the batteries with new ones.

The batteries are accessed by separating the front and the back halves of the meter uncover the 4 screws on the back of the meter and readily legache the three batteries located in the battery compariment, while proving attention to their polarity. Restituch the back making sure that the gosket is in place and tighten the 4 screws to ensure a watertight seal.

Battery replacement must only take place in a non-hazardous area using 1.5V AA (IEC LR6) alkaline batteries.

ACCESSORIES

K-TYPE THERMOCOUPLE PROBES

with integral handle, 1 m (3.3') cable & mini-connector:		
HI766A	Roller surface probe, max 320 °C/600 °F	
HI766B	Surface probe, max 650 °C/1200 °F	
HI766B1	90° Surface probe, max 450 °C/840 °F	
HI766B2	Spring-loaded, surface probe, max 900 °C/1650 °F	
HI766B3	Spring-loaded, small surface probe with insulated shaft, max 200 °C/390 °F	
HI766C	Penetration probe, max 900 °C/1650 °F	
HI766C1	Ultra-fast Penetration probe, max 300 °C/570 °F	
HI766D	Air probe, max 300 °C/570 °F	
HI766E1	General purpose probe, max 900 °C/1650 °F	
HI766E2	General purpose probe, max 900 °C/1650 °F	
HI766F	High temperature, flexible wire probe without handle, max 1100 $^\circ\text{C}/2000~^\circ\text{F}$	
HI766F1	Flexible wire probe w/o handle, max 480 °C/ 900 °F	
HI766TR1	Penetration probe, max 250 °C/482 °F	
HI766TR2	Penetration long probe, max 250 °C/482 °F	
HI766TV1	Pipe clamp probe, max 200 °C/390 °F	
with detachable handle & mini-connector		

(to be used in conjunction with the HI766HD probe handle):

(to be essa in conference and in the first outp probe handle).			
HI766PA	Roller surface probe, max 320 °C/600 °F		
HI766PB	Surface probe, max 650 °C/1200 °F		
HI766PC	Penetration probe, max 900 °C/1650 °F		
HI766PD	Air probe, max 300 °C/570 °F		
HI766PE1	General purpose probe, max 900 °C/1650 °F		
HI766PE2	General purpose probe, max 900 °C/1650 °F		
grill surface probe:			
HI766B4	Grill surface probe with 70 cm (27.6") cable (protect- ed with stainless steel jacket), max 250 °C/482 °F		
HI766B4S	Spare stainless steel sensor for H1766B4 probe		

14

OTHER ACCESSORIES

HI710009	Blue rubber boot
HI710031	Hard carrying case
HI766EX	Extension cable for K-type probes
HI766HD	Rugged thermocouple probe handle with 1 m (3.3') cable fitted with mini-connector

WARRANTY

All Hanna Instruments meters are warranted for two years against defects in workmanship and materials when used for their intended purpose and maintained according to instructions. The probes are warranted for a period of six months.

This warranty is limited to repair or replacement free of charge. Damages due to accidents, misuse, tampering or lack of prescribed maintenance are not covered.

If service is required, please contact your local Hanna Instruments Office. If under warranty, report the model number, date of purchase, serial number and the nature of the failure

First obtain a Returned Goods Authorization number from the Customer Service department, then return the instrument with the Authorization

If the repair is not covered by the warranty, you will be notified of the characs.

When shipping any instrument, make sure it is properly packaged for complete protection.

RECOMMENDATIONS FOR USERS

Before using this product, make sure it is entirely suitable for your specific application and for the environment in which it is used.

Any variation introduced by the user to the supplied equipment may degrade the meters' performance. For yours and the meter's safety do not use or store the meter in hazardous environments.

<u>Note</u>: To clean the meters, do not use aggressive detergents. It is recommended to use water.

Hanna Instruments reserves the right to modify the design, construction and appearance of its products without advance notice.



World Headquarters

Hanna Instruments Inc. Highland Industrial Park 584 Park East Drive Woonsocket, RI 02895 USA www.hannainst.com

Local Office

Hanna Instruments Inc. Highland Industrial Park 584 Park East Drive Woonsocket, RI 02895 USA Phone: 800.426.6287 Fax: 401.765.7575 e-mail: tech@hannainst.com