

Instruction Manual


HI93551 • HI93551N

HI93551R

HI93542 • HI93552

HI93552R

K J T - Thermometers

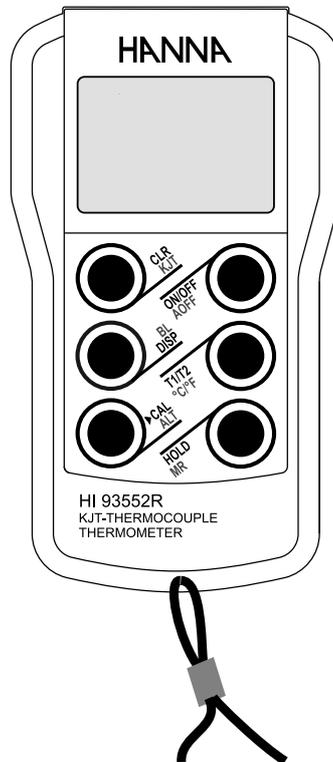

HANNA[®]
instruments

www.hannainst.com

Dear Customer,
Thank you for choosing a Hanna Instruments product.
Please read this instruction manual carefully before using this instrument.
For more information about Hanna Instruments and our products, visit www.hannainst.com or e-mail us at sales@hannainst.com.
For technical support, contact your local Hanna Instruments Office or e-mail us at tech@hannainst.com.

WARRANTY

HI93551, HI93551N, HI93542, HI93552, HI93551R and HI93552R are guaranteed for two years against defects in workmanship and materials when used for their intended purpose and maintained according to instructions. Electrodes and probes are guaranteed for six months. This warranty is limited to repair or replacement free of charge. Damage due to accidents, misuse, tampering or lack of prescribed maintenance is not covered. If service is required, contact your local Hanna Instruments Office.

If under warranty, report the model number, date of purchase, serial number and the nature of the problem. If the repair is not covered by the warranty, you will be notified of the charges incurred. If the instrument is to be returned to Hanna Instruments, first obtain a Returned Goods Authorization number from the Technical Service department and then send it with shipping costs prepaid. When shipping any instrument, make sure it is properly packed for complete protection.

TABLE OF CONTENTS

Preliminary Examination	3
General Description	3
Specifications of HI93551 and HI93551N	4
Specifications of HI93542 and HI93552	6
Specifications of HI93551R and HI93552R	8
Operational Guide	10
Serial Port Communication	15
User Calibration	16
Factory Recalibration	16
Battery Replacement	17
Accessories	18

PRELIMINARY EXAMINATION

Remove the instrument from the packing material and examine it carefully to make sure that no damage has occurred during shipping. If there is any damage, please contact your local Hanna Instruments Office.PC

Each instrument is supplied with:

- 3 x 1.5V AA alkaline batteries
- Instruction manual.

Note: Save all packing material until you are sure that the instrument functions correctly. All defective items must be returned in the original packing with the supplied accessories.

GENERAL DESCRIPTION

These instruments are powerful and flexible thermometers, which can take measurements using different types of thermocouple probes (K, J and T), and have been designed using the latest microprocessor technology to provide reliable and accurate high resolution measurements in a wide temperature range.

Standard features include dual-level LCD (which allows continuous displaying of High and Low temperature values), °C/°F selection, HOLD function, auto-off capability, remaining battery life indication, low battery detection, long battery life and two-year warranty.

HI93542, HI93552 and HI93552R are two-channel thermometers, ideal for monitoring two samples at once.

HI93551N, HI93551R, HI93552 and HI93552R offer additional features, such as calibration of meter and probe at 0°C, backlit display, and capability to store and recall a reading.

Moreover, the **HI93551R** and **HI93552R** models are equipped with a serial port interface.

All rights are reserved. Reproduction in whole or in part is prohibited without the written consent of the copyright owner, Hanna Instruments Inc.

Hanna Instruments reserves the right to modify the design, construction or appearance of its products without advance notice.


SPECIFICATIONS OF HI93551 & HI93551N

SPECIFICATIONS	
Range (*)	K -200.0 to 999.9°C / 1000 to 1371°C -328.0 to 999.9°F / 1000 to 2500°F
	J -200.0 to 999.9°C -328.0 to 999.9°F / 1000 to 1832°F
	T -200.0 to 400.0°C -328.0 to 752.0°F
Resolution	K 0.1°C (-149.9 to 999.9°C) 0.2°C (-200.0 to -150.0°C) / 1°C (1000 to 1371°C) 0.1°F (-24.9 to 999.9°F) / 0.2°F (-249.9 to -25.0°F) 0.3°F (-328.0 to -250.0°F) / 1°F (1000 to 2500°F)
	J 0.1°C (-200.0 to 999.9°C) 0.1°F (-149.9 to 999.9°F)
	T 0.2°F (-328.0 to -150.0°F) / 1°F (1000 to 1832°F)
	0.1°C (-149.9 to 400.0°C) 0.2°C (-200.0 to -150.0°C)
	0.1°F (0.0 to 752.0°F) / 0.2°F (-270.0 to -0.1°F)
	0.3°F (-328.0 to -270.1°F)
Accuracy (@20°C/68°F)	±0.5°C (-100.0 to 999.9°C) / ±1°C (outside) ±1°F (-148.0 to 999.9°F) / ±1.5°F (outside) for one year, excluding probe error
Battery	3x1.5V AA (IEC LR6) batteries, approx. 500 hours of continuous use
Auto-off	user selectable: 60 min or disabled
Environment	-10 to 60°C (14 to 140°F); RH 100%
Dimensions	150 x 80 x 36 mm (5.9 x 3.1 x 1.4")
Weight	235 g (8.3 oz.)

(*) Range may be limited by probe.

HI93551

HI93551N

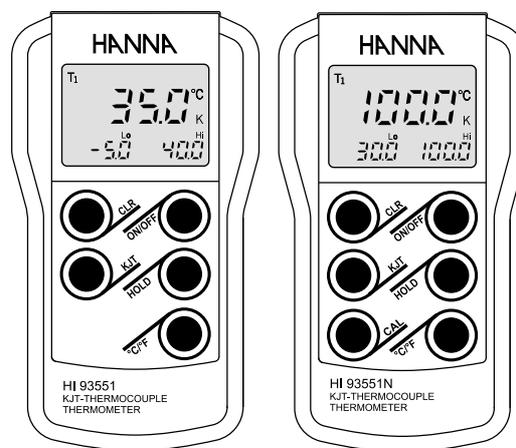

Keyboard Functions:

ON/OFF : turn the meter ON and OFF.

HOLD : freeze the reading on display.

°C/°F : change reading unit (°C or °F).

KJT : select the thermocouple type.


CLR : clear the HI and LO values.

CAL (HI93551N only) : press and hold for about 5 seconds to enter the Calibration mode (with reading within $\pm 3^{\circ}\text{C}$ range); press to abort the Calibration mode.

SPECIFICATIONS OF HI93542 & HI93552

SPECIFICATIONS	
Range (*)	K -200.0 to 999.9°C / 1000 to 1371°C -328.0 to 999.9°F / 1000 to 2500°F
	J -200.0 to 999.9°C -328.0 to 999.9°F / 1000 to 1832°F
	T -200.0 to 400.0°C -328.0 to 752.0°F
Resolution	K 0.1°C (-149.9 to 999.9°C) 0.2°C (-200.0 to -150.0°C) / 1°C (1000 to 1371°C) 0.1°F (-24.9 to 999.9°F) / 0.2°F (-249.9 to -25.0°F) 0.3°F (-328.0 to -250.0°F) / 1°F (1000 to 2500°F)
	J 0.1°C (-200.0 to 999.9°C) 0.1°F (-149.9 to 999.9°F) 0.2°F (-328.0 to -150.0°F) / 1°F (1000 to 1832°F)
	T 0.1°C (-149.9 to 400.0°C) 0.2°C (-200.0 to -150.0°C) 0.1°F (0.0 to 752.0°F) / 0.2°F (-270.0 to -0.1°F) 0.3°F (-328.0 to -270.1°F)
	Accuracy ±0.5°C (-100.0 to 999.9°C) / ±1°C (outside) (@20°C/68°F) ±1°F (-148.0 to 999.9°F) / ±1.5°F (outside) for one year, excluding probe error
	Battery 3x1.5V AA (IEC LR6) batteries, approx. 500 hours of continuous use (BL off)
	Auto-off user selectable: 60 min or disabled (HI 93542) user selectable: 8 min, 60 min, disabled (HI 93552)
Environment -10 to 60°C (14 to 140°F); RH 100%	
Dimensions 150 x 80 x 36 mm (5.9 x 3.1 x 1.4")	
Weight 235 g (8.3 oz.)	

(*) Range may be limited by probe.

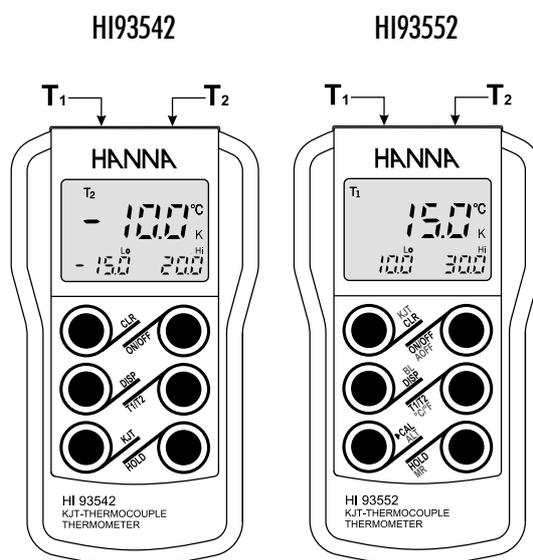

Keyboard Functions:

ON/OFF : turn the meter ON and OFF.

T1/T2 : select the reading channel (T1, T2 or T1-T2).

HOLD : freeze the reading on display. In **HI93552**, the frozen value is also stored in non-volatile memory.

CLR : clear the HI and LO values, reset the relative or average measurement.

DISP : select Normal, Relative, Average or T1/T2 measuring mode.

KJT : select the thermocouple type.

ALT (HI93552 only) : enable the second function keys; the "ALT" tag turns on to indicate that the second functions are enabled.

Note: The **ALT** key can be released before pressing the second function key for 1-hand operation.

ALT/▶CAL : press and hold for about 5 seconds to enter the Calibration mode (with reading within $\pm 3^{\circ}\text{C}$ range).

(ALT +) AOFF : set auto-off delay (8min, 60min, disabled).

(ALT +) °C/°F : change reading units ($^{\circ}\text{C}$ or $^{\circ}\text{F}$).

(ALT +) MR : recall memorized value.


(ALT +) KJT : select the thermocouple type.

(ALT +) BL : toggle the backlight ON and OFF.

SPECIFICATIONS OF HI93551R & HI93552R

SPECIFICATIONS	
Range (*)	K -200.0 to 999.9°C / 1000 to 1371°C -328.0 to 999.9°F / 1000 to 2500°F
	J -200.0 to 999.9°C -328.0 to 999.9°F / 1000 to 1832°F
	T -200.0 to 400.0°C -328.0 to 752.0°F
Resolution	K 0.1°C (-149.9 to 999.9°C) 0.2°C (-200.0 to -150.0°C) / 1°C (1000 to 1371°C) 0.1°F (-24.9 to 999.9°F) / 0.2°F (-249.9 to -25.0°F) 0.3°F (-328.0 to -250.0°F) / 1°F (1000 to 2500°F)
	J 0.1°C (-200.0 to 999.9°C) 0.1°F (-149.9 to 999.9°F) 0.2°F (-328.0 to -150.0°F) / 1°F (1000 to 1832°F)
	T 0.1°C (-149.9 to 400.0°C) 0.2°C (-200.0 to -150.0°C) 0.1°F (0.0 to 752.0°F) / 0.2°F (-270.0 to -0.1°F) 0.3°F (-328.0 to -270.1°F)
	Accuracy ±0.5°C (-100.0 to 999.9°C) / ±1°C (outside) (@20°C/68°F) ±1°F (-148.0 to 999.9°F) / ±1.5°F (outside) for one year, excluding probe error
	Battery 3x1.5V AA (IEC LR6) batteries, approx. 500 hours of continuous use (BL off)
	Auto-off user selectable: 8 min, 60 min, disabled
Serial Port Communication	unidirectional, 8-bit data, 1200 baud (see "Serial Communication" section)
Environment	-10 to 60°C (14 to 140°F); RH 100%
Dimensions	150 x 80 x 36 mm (5.9 x 3.1 x 1.4")
Weight	235 g (8.3 oz.)

(*) Range may be limited by probe.

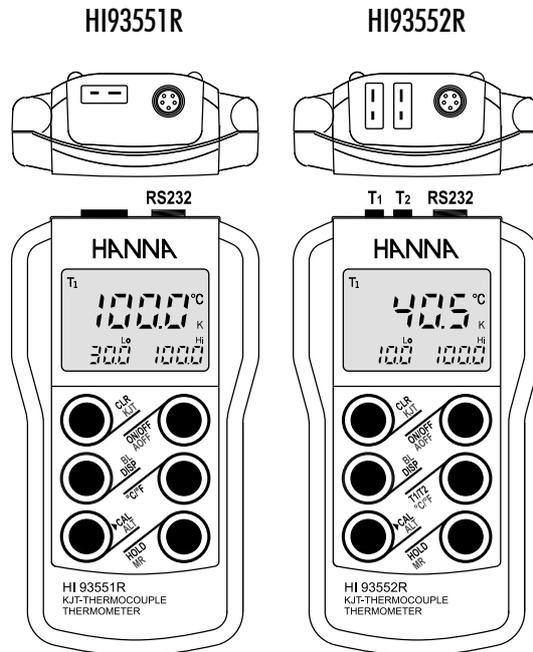

Keyboard Functions:

ON/OFF : turn the meter ON and OFF.

T1/T2 : select the reading channel (T1, T2 or T1-T2).

HOLD : freeze the reading on display. The frozen value is also stored in non-volatile memory.

CLR : clear the HI and LO values, reset the relative or average measurement.

DISP : select Normal, Relative, Average or T1/T2 measuring mode.

ALT : enable the second function keys; the "ALT" tag turns on to indicate that the second functions are enabled.

Note: The ALT key can be released before pressing the second function key for 1-hand operation.

ALT/▶CAL : press and hold for about 5 seconds to enter the Calibration mode (with reading within $\pm 3^{\circ}\text{C}$ range).

(ALT +) AOFF : set auto-off delay (8 min, 60 min, disabled).

(ALT +) °C/°F : change reading units ($^{\circ}\text{C}$ or $^{\circ}\text{F}$).


(ALT +) MR : recall memorized value.

(ALT +) KJT : select the thermocouple type.

(ALT +) BL : toggle the backlight ON and OFF.


OPERATIONAL GUIDE

To switch the instrument ON, press the ON/OFF key.
 The thermometer will carry out a self diagnostic test routine, the LCD will show all segments for a few seconds (or as long as ON/OFF is held), followed by the percentage indication of the remaining battery life.

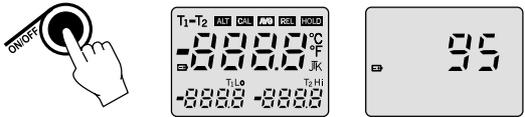

The thermometer then enters normal measurement mode.
 If a temperature probe is plugged in, the meter displays the measured temperature.

If no probe is plugged in, or if the reading is over-range, the display shows flashing dashes.
 If a measurement is slightly over the range of the meter specifications, the display will flash the closest full-scale value.

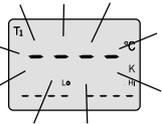

To switch the meter OFF, press the ON/OFF key.
Note: The meters are provided with an acoustic signal feature activated when buttons are pressed, which can be disabled using a switch located in the battery compartment (see figure on page 10).

°C/°F SELECTION

Measurements can be displayed in either degrees Celsius or Fahrenheit. The meter is factory set to °C scale; to change the scale, press °C/°F key (HI93551, HI93551N and HI93551R) or (ALT+)°C/°F keys (HI93552 and HI93552R), or set the switch located in the battery compartment (HI93542, see figure on page 10).

THERMOCOUPLE TYPE SELECTION, KJT

By pressing KJT (HI93551, HI93551N and HI93542) or (ALT+)KJT keys (HI93551R, HI93552 and HI93552R), the thermometer is set according to the connected thermocouple type. The corresponding symbol will be displayed, i.e. K for K-type, J for J-type, T for T-type.




Note: Changing thermocouple type resets the HI and LO values.

HOLD and MR FUNCTIONS

The HOLD function is activated by pressing the HOLD key.

The measured temperature is held on the display until HOLD is pressed again. The "HOLD" tag blinks on the display while in HOLD mode.

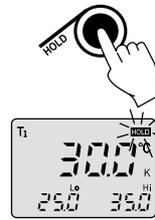

Note: Although the display is frozen, internally the meter continues measuring and updating Hi/Lo, relative and average values.

In HI93551R, HI93552 and HI93552R, the held value is also stored in non-volatile memory and can be recalled by pressing (ALT+) MR keys. While the MR key is held, the "HOLD" tag lights up and the meter displays the stored value; when the MR key is released, after 1 second the meter returns to normal measurement mode.



HIGH/LOW TEMPERATURES


The maximum and minimum temperatures are continuously monitored and displayed on the lower portion of the LCD.



Note: When the reading goes over-range or the probe is removed, the Hi and Lo values display dashes until cleared.

CLEAR FUNCTION

Upon pressing the CLR key, the High/Low values may be cleared at any time during measurement and the current reading is assigned to the highest and lowest temperature values for the displayed channel only.

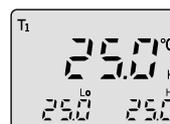


In HI93551R, HI93542, HI93552 and HI93552R models, pressing CLR also resets relative and average values.

AUTO SHUT-OFF

To save battery life, the meters are provided with an auto-off feature, which switches the meter off after 60 minutes of nonuse.

In HI93551, HI93551N and HI93542 models, to disable this feature set the internal slide-switch located in the battery compartment (see figure on page 10).

The HI93551R, HI93552 and HI93552R allow the user to select the auto-off time period through the front keyboard; press (ALT+) AOFF to enter the mode, then set the desired auto shut-off interval (8 min, 60 min, or disabled) with the ALT key; release all buttons, wait a few seconds and the meter will return to normal measurement mode.

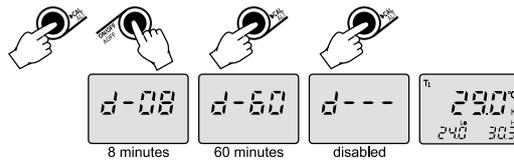

BACKLIGHT FEATURE


The HI93551R, HI93552 and HI93552R models are provided with a backlight feature, which can be easily activated through the keyboard by pressing the (ALT+)BL keys.



Note: The backlight automatically shuts off after approximately 1 minute with no buttons pressed.

BATTERY COMPARTMENT

See "Battery replacement" section for back cover removal/installation.

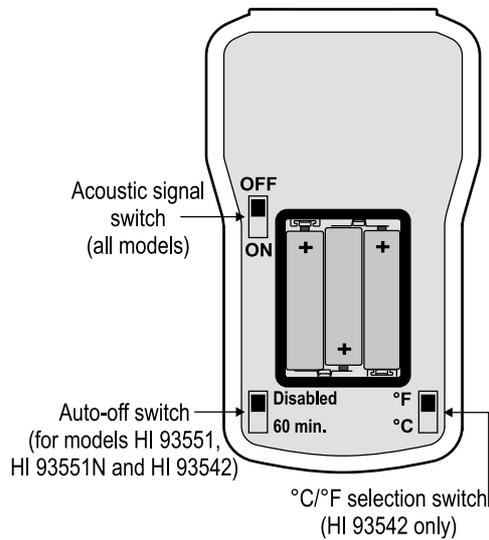


2-CHANNEL MODELS (HI93542, HI93552 & HI93552R)

HI93542, HI93552 and HI93552R models can monitor two samples through two independent temperature channels (probes).

The display shows the actual, Hi and Lo (or T1 and T2) values of the selected channel (T1, T2 or T1-T2). The corresponding tags light up to inform the user.

To select the desired channel, use the T1/T2 key.

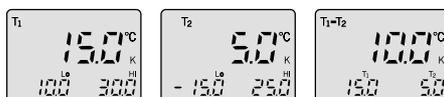

The 2-channel and HI93551R models are also provided with the DISP function, which allows the user to select the information to be displayed.


- While in T1 or T2, pressing DISP switches the display between normal, relative and average measurement modes.

In the normal mode, the main body of the LCD shows the current temperature while the lower portion displays the Hi/Lo limits for that channel.

When the meter enters relative mode, the "REL" tag lights up and the current temperature for that channel is set as the reference temperature. Pressing CLR will also set the reference to the current temperature.

In relative mode, the main body of the LCD shows the difference from the reference temperature. The lower portion displays the current temperature for the selected channel.

When average mode is entered, the "AVG" tag lights up and the current value is set as the new beginning value. The average can be reset by pressing CLR while in the average mode. In average mode, the main body of the LCD shows the average temperature, while the lower portion displays the current temperature for the selected channel.

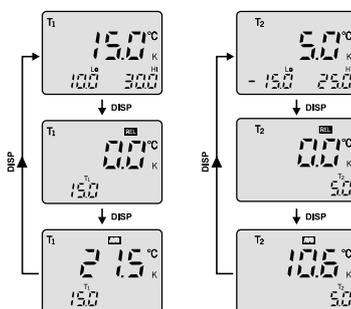


The average mode will calculate the average for a period of up to 24 hours. If a different mode is selected for that channel, the average will no longer calculate and the value will be lost.

At the end of the 24 hour period, the "AVG" tag will blink to indicate that sampling has stopped, and the displayed value is the last average calculated.

If a probe is removed or over-range is reached while in average mode, the display shows flashing dashes and blinking "AVG" tag. The average value is lost and will not restore even if the condition restores. To start the average cycle again, either press CLR or re-enter the average mode.

- While in T1-T2 (not for HI93551R), pressing DISP will switch between 4 displays:

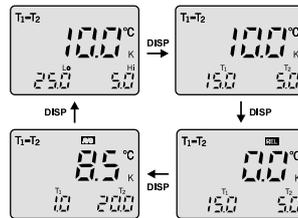

Note: Pressing T1/T2 to change the channel will not alter the information chosen to be displayed for each channel (DISP). For example, if T1 is in average mode, the average will continue to be calculated even if the user press T1/T2 to see T2.

Note: Relative/average modes cannot be entered if dashes are shown in the main portion of the LCD.

Note: The auto-off time is disabled whenever a channel is set to average mode.

SERIAL PORT COMMUNICATION (HI93551R & HI93552R only)

HI93551R and HI93552R feature an RS232 output for transferring measurement data (once every second for HI93551R and once every 2 seconds for HI93552R) to devices provided with RS232 input (PC or printer).

The communication protocol has been designed to transmit to the receiving unit all the displayed information.

The communication is unidirectional (meter to receiving unit only) and the transmissions consist in a 32-character ASCII string, compatible with our optional HI92000 software.

To allow our users access to the latest version of Hanna Instruments PC compatible software, we made the products available for download at <http://software.hannainst.com>. Select the product code and click **Download Now**. After download is complete, use the **setup.exe** file to install the software.

The 32-character data string is structured as follows:

Main portion of the LCD

- byte 0 probe type: K-thermocouple (k)
- bytes 1, 2 measurement channel: T1, T2, T1-T2 (Td)
- byte 3 measurement mode: Normal (blank), Relative (R), Average (A), Average done (a)
- byte 4 operating mode: Hold (H), Memory recall (M)
- byte 5 blank character
- bytes 6-10 measurement: reading (XXX.X or blank XXXX), over-range (OVRG blank), no data (blank ----)
- byte 11 temperature unit: C, F
- byte 12 blank character

Secondary LCD, left portion

- bytes 13, 14 info description: low temperature (Lo), T1 (T1)
- byte 15 blank character
- bytes 16-20 measurement: reading (XXX.X or blank XXXX), over-range (5 blanks), no data (blank ----)
- byte 21 blank character

Secondary LCD, right portion

- bytes 22, 23 info description: high temperature (Hi), T2 (T2)
- byte 24 blank character
- bytes 25-29 measurement: reading (XXX.X or blank XXXX), over-range (5 blanks), no data (blank ----)
- byte 30 <CR>
- byte 31 line feed

USER CALIBRATION

The HI93551N, HI93551R, HI93552 and HI93552R models can be calibrated at 0°C by using an ice bath.

- Prepare an ice bath with approximately equal volumes of distilled water and chopped ice made from distilled water.
- Immerse the temperature probe in the center of the ice bath, taking care not to touch the ice with the probe tip.
- Ensure that the meter is measuring a temperature within $\pm 3^{\circ}\text{C}$.
- To enter the Calibration mode, press and hold the CAL button for about 5 seconds.
- The CAL tag turns on to indicate that the Calibration mode has been entered.

Note: If the measurement is outside the $\pm 3^{\circ}\text{C}$ window, the meter does not enter Calibration mode.



- When the meter reaches the stability condition, which is detected when the measurement remains within $\pm 0.2^{\circ}\text{C}$ for 5 seconds, the calibration is accepted and the reading becomes 0°C (32°F).
- The meter then automatically returns to normal mode.

Note: To exit the Calibration mode at any time, press the CAL key.

Note: User calibration cannot be entered in relative, average or in T1-T2 mode.

Note: User calibration is only performed on the current channel displayed (T1 or T2).

FACTORY RECALIBRATION


All Hanna thermometers have been accurately pre-calibrated at the factory.

It is generally recommended to have all thermometers recalibrated at least once a year.

For an accurate recalibration, contact your nearest Hanna Customer Service Center.

BATTERY REPLACEMENT

When the battery level is below 5%, a warning symbol will blink on the LCD to indicate a low battery condition.

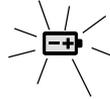

If the battery level is low enough to cause erroneous readings, the Battery Error Prevention System (BEPS) turns the meter off. Immediately replace the batteries with new ones.

The batteries are accessed by separating the front and the back halves of the meter: unscrew the 4 screws on the back of the meter and carefully replace the three batteries located in the battery compartment, while paying attention to their polarity. Reattach the back making sure that the gasket is in place and tighten the 4 screws to ensure a watertight seal.

Battery replacement must only take place in a non-hazardous area using 1.5V AA (IEC LR6) alkaline batteries.

Recommendations for Users

Before using this product, make sure it is entirely suitable for your specific application and for the environment in which it is used. Any variation introduced by the user to the supplied equipment may degrade the meter's performance. For yours and the meter's safety do not use or store the meter in hazardous environments.

Note: To clean the meters, do not use aggressive detergents. It is recommended to use water.

ACCESSORIES

K-TYPE THERMOCOUPLE PROBES

with integral handle, 1 m (3.3') cable & mini-connector:

- HI766A Roller surface probe, max 320°C/600°F
- HI766B Surface probe, max 650°C/1200°F
- HI766B1 90° Surface probe, max 450°C/840°F
- HI766B2 Spring-loaded, surface probe, max 900°C/1650°F
- HI766B3 Spring-loaded, small surface probe with insulated shaft, max 200°C/390°F
- HI766C Penetration probe, max 900°C/1650°F
- HI766C1 Ultra-fast penetration probe, max 300°C/570°F
- HI766D Air probe, max 300°C/570°F
- HI766E1 General purpose probe, max 900°C/1650°F
- HI766E2 General purpose probe, max 900°C/1650°F
- HI766F High temperature, flexible wire probe without handle, max 1100°C/2000°F
- HI766F1 Flexible wire probe w/o handle, max 480°C/ 900°F
- HI766TR1 Penetration probe, max 250°C/482°F
- HI766TR2 Penetration long probe, max 250°C/482°F
- HI766TV1 Pipe clamp probe, max 200°C/390°F

with detachable handle & mini-connector (to be used in conjunction with the HI 766HD probe handle):

- HI766PA Roller surface probe, max 320°C/600°F
- HI766PB Surface probe, max 650°C/1200°F
- HI766PC Penetration probe, max 900°C/1650°F
- HI 66PD Air probe, max 300°C/570°F
- HI766PE1 General purpose probe, max 900°C/1650°F
- HI766PE2 General purpose probe, max 900°C/1650°F

grill surface probe:

- HI766B4 Grill surface probe with 70 cm (27.6") cable (protected with stainless steel jacket), max 250°C/482°F
- HI7664B4S Spare stainless steel sensor for HI766B4 probe

OTHER ACCESSORIES

HI710007	Shockproof rubber boot, blue
HI710008	Shockproof rubber boot, orange
HI710018	Spare protective case
HI710031	RUGGED carrying case
HI766EX	Extension cable for K-type probes
HI766HD	Rugged thermocouple probe handle with 1m (3.3') cable fitted with mini-connector
HI920011	Serial cable for PC connection

CERTIFICATION

All Hanna Instruments conform to the **CE European Directives**.

Disposal of Electrical & Electronic Equipment. The product should not be treated as household waste.

Instead hand it over to the appropriate collection point for the recycling of electrical and electronic equipment which will conserve natural resources.

Disposal of waste batteries. This product contains batteries, do not dispose of them with other household waste. Hand them over to the appropriate collection point for recycling.

Ensuring proper product and battery disposal prevents potential negative consequences for the environment and human health. For more information, contact your city, your local household waste disposal service, the place of purchase or go to www.hannainst.com.



RoHS
compliant





World Headquarters

Hanna Instruments Inc.
Highland Industrial Park
584 Park East Drive
Woonsocket, RI 02895 USA
www.hannainst.com